

TRASSIR Cloud TR-W2C1

Wi-Fi camera




User Manual

Camera package:

- | | |
|--|------|
| 1. IP-camera | 1pc. |
| 2. Fixing kit (mounting hole template) | 1pc. |
| 3. Power supply unit 5V DC | 1pc. |
| 4. Power cable, 2 m | 1pc. |
| 5. User manual | 1pc. |

Product overview:

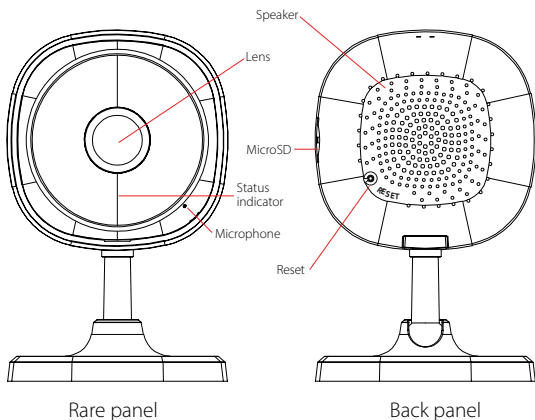

Quick start:

-  Connect the power supply to the camera and wait one minute before the setup and LED indicator flashes fast
-  Download TRASSIR Client application
(You can add the camera only with it)
-  Run the TRASSIR Client application, enter your username and password or create new account*
-  Go to Settings
-  Add camera
-  Trassir
-  Follow the instruction on the page

* Go to trassircloud.com to create a new account.

Status LED indicator:

- Does not flash if the power supply is absent
- Flashes fast if the camera is available for setup
- Flashes slow if there is no connection to 2.4 GHz Wi-Fi network
- Shows steady if the camera is already connected to Wi-Fi network

MicroSD connection

MicroSD card installation

Insert the MicroSD card (up to 128 Gb) into the slot till it goes click.



MicroSD is available for record. The camera starts the default recording to the MicroSD card when it detects motion. Use the TRASSIR Client mobile application for viewing the archive from the SD card.

*Camera needs to be connected to the TRASSIR Cloud service according to the existing tariff plans (<https://trassircloud.com/#o5>)

Specification

Model	TR-W2C1
Image sensor	1/2.9" CMOS 2MP
Resolution	FullHD (1920x1080)
Frame rate	FullHD@25fps
Day/Night Mode	Mechanical ICR
Sensitivity	0.005Lux (F1.8) / 0Lux (IR on)
IR range	up to 10 m
Lens	2.8 mm
WDR	Real WDR (105dB)
Video compression	H.265 / H.264
Bitrate	8Mbps
Local storage	MicroSD up to 128Gb*
Audio	Microphone/Speaker
Motion detector	Digital
Wi-Fi	2.4 GHz
Power supply	5V DC (1A)
Power consumption	4.5 W
Dimensions	110 x 66 x 66 mm
Net weight	250 g
Working temperature	-10°C ... +50°C

* - MicroSD card is not included into camera package